

TRIPLE-R
HIGH PERFORMANCE LIGHTING



DEFENDER (2020+)

A PILLAR MOUNTING KIT

(FOR UTILITY-25)

FITTING INSTRUCTIONS

TECHNICAL SUPPORT

For additional support, please contact us by email: sales@triple-r-lights.com

WHAT'S INCLUDED

- 2x A Pillar Mounting Bracket (LH/RH)
- 2x M6 Fasteners
- 2x Black Bolt Cover

ALSO REQUIRED

- 2x Utility-25
- 1x Two-Lamp Harness (2L-UT-500)

DIFFICULTY LEVEL



TOOLS REQUIRED



PLASTIC TRIM
TOOL SET



WIRE
CUTTERS



WIRE STRIPPERS
AND RATCHET CRIMPERS



TORX 30
SCREWDRIVER




SOCKET SET



ALLEN KEY
SET



DRILL BIT
(SWITCH HOLE - 20MM)

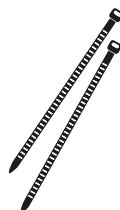

CABLE TIES

PRE-INSTALLATION CHECKS

Ensure battery is disconnected.

INSTALLATION



STEP 1

Remove the A Pillar trim screw cover using a plastic trim tool.



STEP 2

Once the trim is removed, it will expose the T30 torx screw.

Undo the T30 Torx screw.



STEP 3

Remove the bracket on the Utility-25's.



STEP 4

Install the Utility-25 mounting bracket to the A Pillar brackets as shown using the supplied bolt, nyloc nut and washer.

INSTALLATION CONTINUED.**STEP 5**

Mount the Lamp onto the Utility-25 mount and tuck the lamps cable as shown.

**STEP 6**

Place the A Pillar mount where you removed the A Pillar trim screw cover.

**STEP 7**

Tuck the lamps cable into the engine bay using a plastic trim tool.


**STEP 8**

Use the included bolt's to secure the A Pillar bracket's to the vehicle's A Pillar.

**STEP 9**


Insert the black plastic bolt cover to conceal the silver bolt (both sides).

WIRING

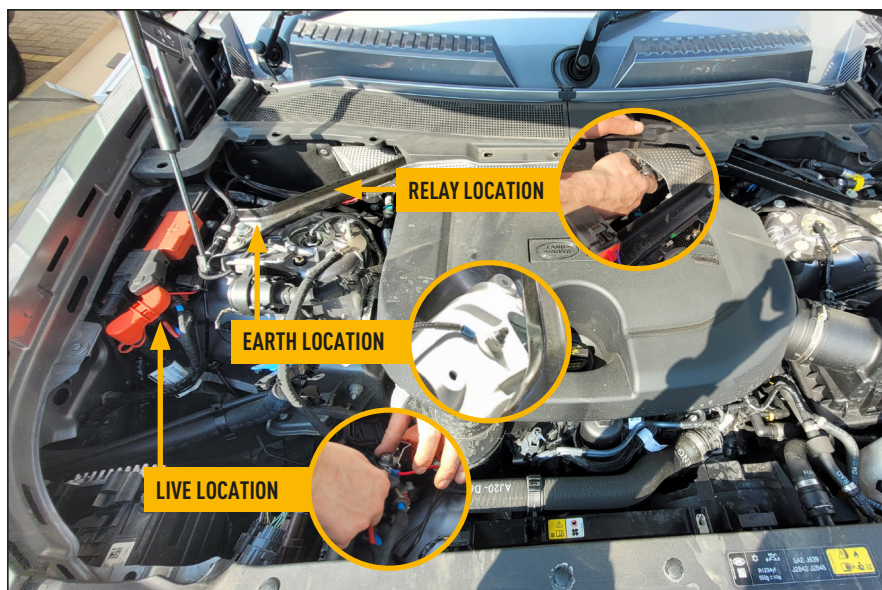

TRIPLE-R LIGHTS WIRING KIT

Mount the relay and connect the live and earth connections.

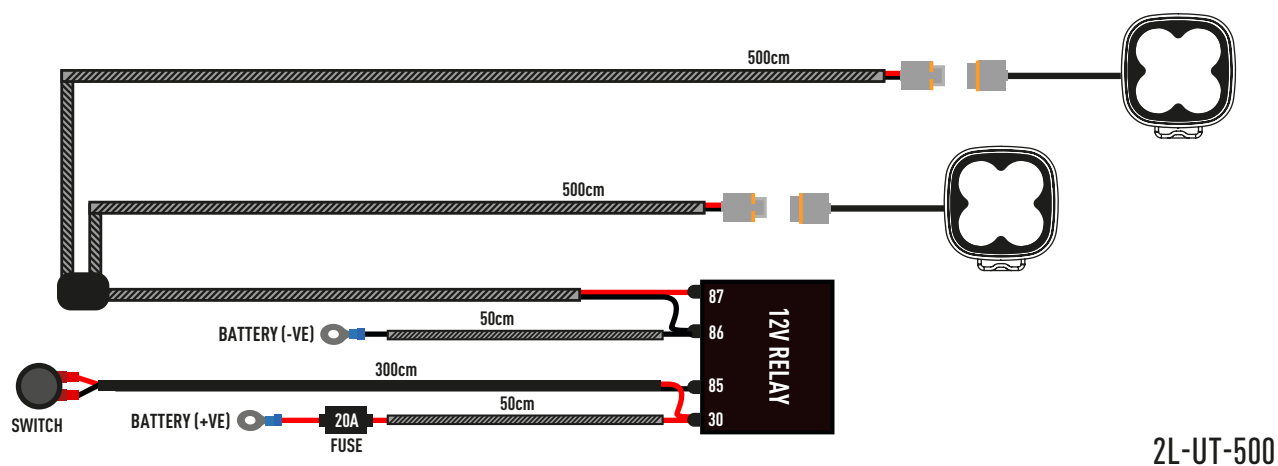

WIRING WITH SWITCH

Run the switch cable through the factory grommet.

Drill a 20mm hole and install the switch (recommended switch location shown).



TRIPLE-R
HIGH PERFORMANCE LIGHTING

WWW.TRIPLE-R-LIGHTS.COM

sales@triple-r-lights.com
Triple-R Lights LLC, 16192 Coastal Highway,
Lewes, Delaware, 19958, USA



UK BUILT | US DRIVEN