


MOUNTING INSTRUCTIONS

CENTRE MOUNTING


1



Please use a thread seal compound (i.e. Loctite 222) to protect the lamp fastener from binding over time. See our T&Cs for more information.

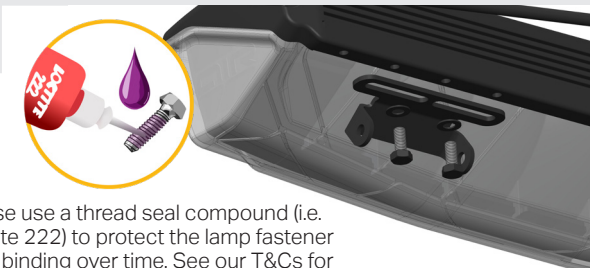

2

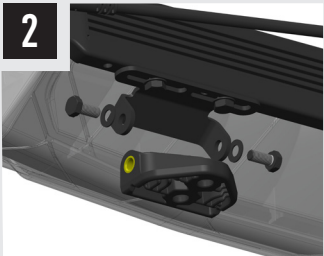

3



SIDE MOUNTING

1



Please use a thread seal compound (i.e. Loctite 222) to protect the lamp fastener from binding over time. See our T&Cs for more information.



2



3



WARRANTY INFORMATION

Your purchase of this Triple-R Lights product is an investment in a product designed and manufactured to the highest standards, but sometimes things can go wrong. You do not need to register your product with us, as we can trace the product through the unique serial number of the lamp.

In the unlikely event of having to make a claim, please retain your purchase receipt and pass it back to the retailer from where you first purchased the product, at the point of raising any issue.

We hope you enjoy your Triple-R Lights product, and wish you many years of a safer, more enjoyable night driving experience.

THANK YOU!

We appreciate your purchase of a Triple-R Lights product, and value your feedback. If you would like to leave feedback on your Triple-R experience, please head to the relevant product page on our website www.triple-r-lights.com.



TRIPLE-R
HIGH PERFORMANCE LIGHTING

A LAZER LAMPS COMPANY

QIR

INSTRUCTIONS

TRIPLE-R
HIGH PERFORMANCE LIGHTING

WWW.TRIPLE-R-LIGHTS.COM

+1 520 468 2633
sales@triple-r-lights.com

Triple-R Lights LLC, 600 North Bullard Avenue, Suite 6
Goodyear, Arizona, 85338, USA


 UK BUILT | US DRIVEN    /TRIPLERLIGHTS

ELECTRICAL CONNECTION

IMPORTANT INFORMATION

Please disconnect the vehicle battery before installing or servicing your LED light installation. If in doubt, it is recommended to use the services of a professional installer. It is recommended to use the available corresponding Triple-R wiring kit for your product. If utilizing existing (non Triple-R) wiring, make sure to use the appropriate wire gauge and fusing in line with your lights.

SUPERSEAL (3-PIN) WIRING KIT | 2L-LP-PL-120

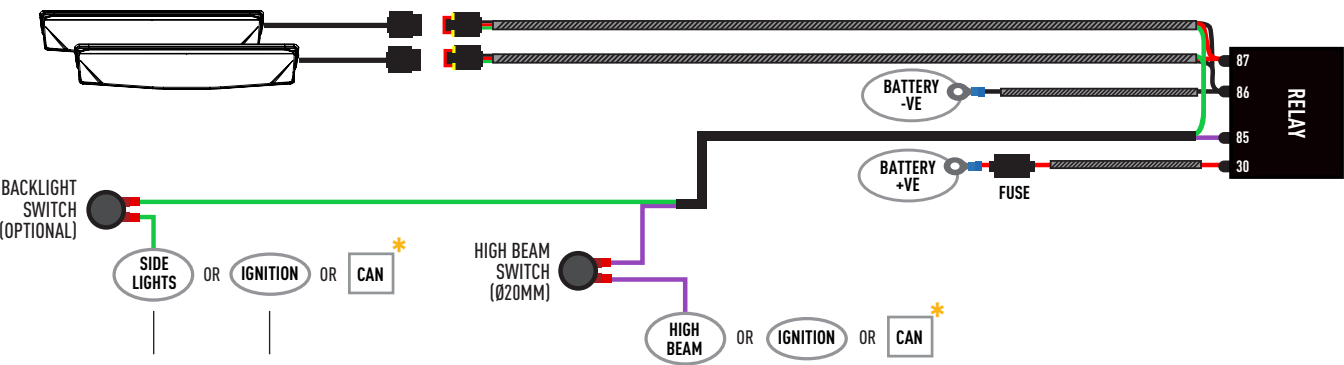


Connecting direct to the ignition or side lights means the backlight function will operate when the vehicle ignition is turned on or the side lights are active. Adding a switch will allow the back-light function to be independently deactivated / activated as required.

Customers have the option to connect to a positive battery (or ignition feed) and operate the light via a switch. Alternatively, the lights can be connected directly to the vehicle high beam (when operating in the DOT compliant Low Output Mode) with the option for an isolator switch.


* CAN INTEGRATION

For vehicles where it is not possible to locate a 12V side light / high beam signal, it will be necessary to take those signals from the vehicle's CAN system.

For connection options please visit the Triple-R Lights website, or contact your nearest dealer.

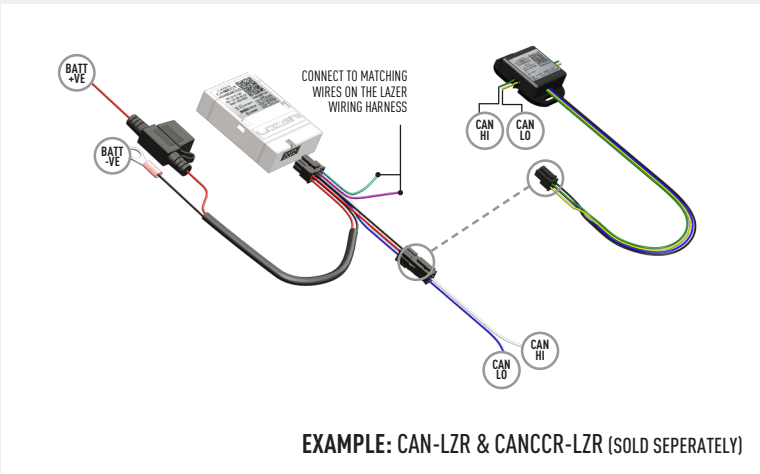

AIR BACKLIGHT FUNCTION

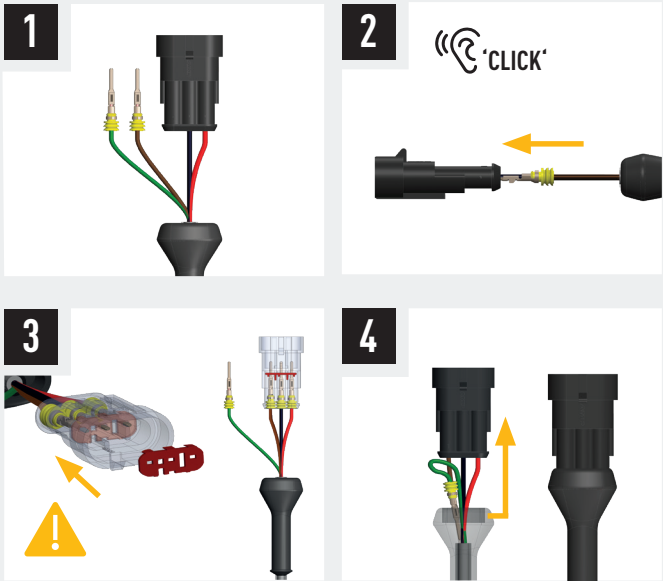

For contact removal instructions, visit our YouTube channel.


LAMP OPERATING MODES

BOOST MODE



100% light output for off-road use or where local laws and regulations allow.

Air-90 (Boost Mode)

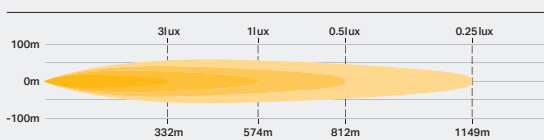

LOW OUTPUT MODE DOT SAE



Reduced output to avoid glare from large reflective objects (e.g. road signs), and/or for operation compliant with DOT/SAE Regulations.

Air-90 (Low Output Mode)

