

# MOUNTING INSTRUCTIONS

#### SIDE MOUNTING

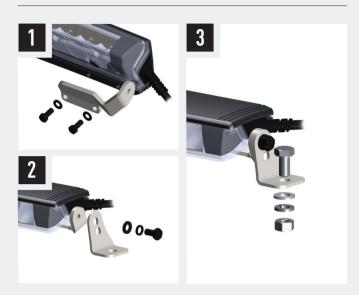

#### NUMBER PLATE MOUNT

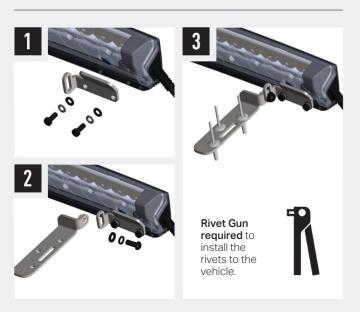

# WARRANTY INFORMATION

Your purchase of this Triple-R Lights product is an investment in a product designed and manufactured to the highest standards, but sometimes things can go wrong. You do not need to register your product with us, as we can trace the product through the unique serial number of the lamp.

In the unlikely event of having to make a claim, please retain your purchase receipt and pass it back to the retailer from where you first purchased the product, at the point of raising any issue.

We hope you enjoy your Triple-R Lights product, and wish you many years of a safer, more enjoyable night driving experience.

# THANK YOU!

We appreciate your purchase of a Triple-R Lights product, and value your feedback. If you would like to leave feedback on your Triple-R experience, please head to the relevant product page on our website www.triple-r-lights.com.





A LAZER LAMPS COMPANY





WWW.TRIPLE-R-LIGHTS.COM

+1 520 468 2633 sales@triple-r-lights.com

Triple-R Lights LLC, 600 North Bullard Avenue, Suite 6 Goodyear, Arizona, 85338, USA









## **ELECTRICAL CONNECTION**


Please disconnect the vehicle battery before installing or servicing your LED light installation. If in doubt, it is recommended to use the services of a professional installer. It is recommended to use the available corresponding Triple-R wiring kit for your product. If utilizing existing (non Triple-R) wiring, make sure to use the appropriate wire gauge and fusing in line with your lights.

#### **SUPERSEAL (2-PIN)** | GLIDE WITHOUT BACKLIGHT



Customers have the option to connect to a positive battery (or ignition feed) and operate the light via a switch. Alternatively, the lights can be connected directly to the vehicle high beam (when operating in the DOT complaint Low Output Mode) with the option for an isolator switch.

# SUPERSEAL (3-PIN) | GLIDE WITH BACKLIGHT

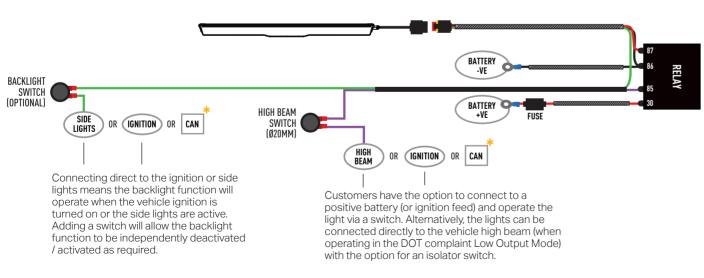

## \* CAN INTEGRATION


For vehicles where it is not possible to locate a 12V side light / high beam signal, it will be necessary to take those signals from the vehicle's CAN system.

For connection options please visit the Triple-R Lights website, or contact your nearest dealer.



**EXAMPLE: CNY-DIR-K** (SOLD SEPERATELY)

Scan the QR code for more infomation on CANNY.

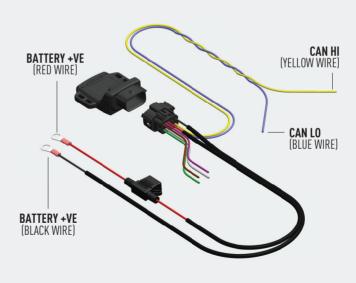



## **LAMP OPERATING MODES**

The lamp features two levels of intensity. To switch between BOOST mode and LOW OUTPUT (DOT / SAE Compliant) mode, flash the vehicle high beam off and on rapidly (<0.5secs) from High Beam ON condition (High Beam must have been active for >2s for the mode to change). Note, the lamp automatically resets to BOOST mode after the lamp being off again for >2s.

To permanently operate the lamps in **BOOST mode**, turn the vehicle high beam on for 20s (+/- 3s) then flash the vehicle high beam off/on 14 times - the light will pulse twice to indicate BOOST mode only is activated.

To permanently operate the lamps in LOW OUTPUT (DOT/ SAE compliant) mode, turn the vehicle high beamon for 20s (+/- 3s) then flash the vehicle high beam off/on 19 times - the light will pulse three times to indicate LOW OUTPUT mode only is activated.

To return to the **default mode** where the light can quickly switch between BOOST and LOW OUTPUT mode, turn the vehicle high beam on for 20s (+/- 3s) then flash the vehicle high beam off/on 9 times – the light will pulse to indicate the default mode is activated.

Scan the QR code for more information.







Please visit the lamps' product page on our website at www.triple-r-lights. com to view the DOT / SAE compliance test reports.