

* CAN INTEGRATION


For vehicles where it is not possible to locate a 12V side light / high beam signal, it will be necessary to take those signals from the vehicle's CAN system.

For connection options please visit the Triple-R Lights website, or contact your nearest dealer.



EXAMPLE: CNY-DIR-K
(SOLD SEPERATELY)

Scan the QR code for more information on CANNY.

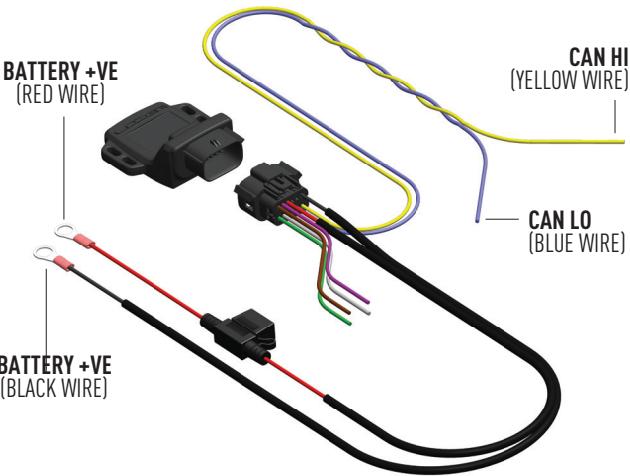


- OUTPUT 1 (PURPLE WIRE)
- OUTPUT 2 (BROWN WIRE)
- OUTPUT 3 (GREEN WIRE)
- OUTPUT 4 (GREY WIRE)

MOUNTING OPTIONS

CENTER MOUNT KIT (INLCUED WITH LAMPS)

Tighten the M5 grub screws when bracket is positioned in the optimum position to suit the vehicle mounting points.

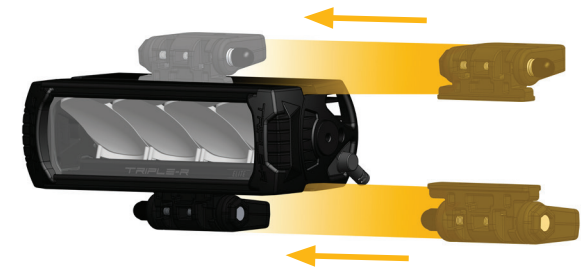

SIDE MOUNT KIT INFORMATION (SOLD SEPERATELY)



Please use a thread seal compound (i.e. Loctite 222) to protect the lamp fastener from binding over time. See our T&Cs for more information.

TRIPLE-R
HIGH PERFORMANCE LIGHTING

A LAZER LAMPS COMPANY

R
SERIES

INSTRUCTIONS

TRIPLE-R
HIGH PERFORMANCE LIGHTING

WWW.TRIPLE-R-LIGHTS.COM

+1 520 468 2633

sales@triple-r-lights.com

Triple-R Lights LLC, 600 North Bullard Avenue, Suite 6
Goodyear, Arizona, 85338, USA




UK BUILT | US DRIVEN




/TRIPLERLIGHTS

ELECTRICAL CONNECTION

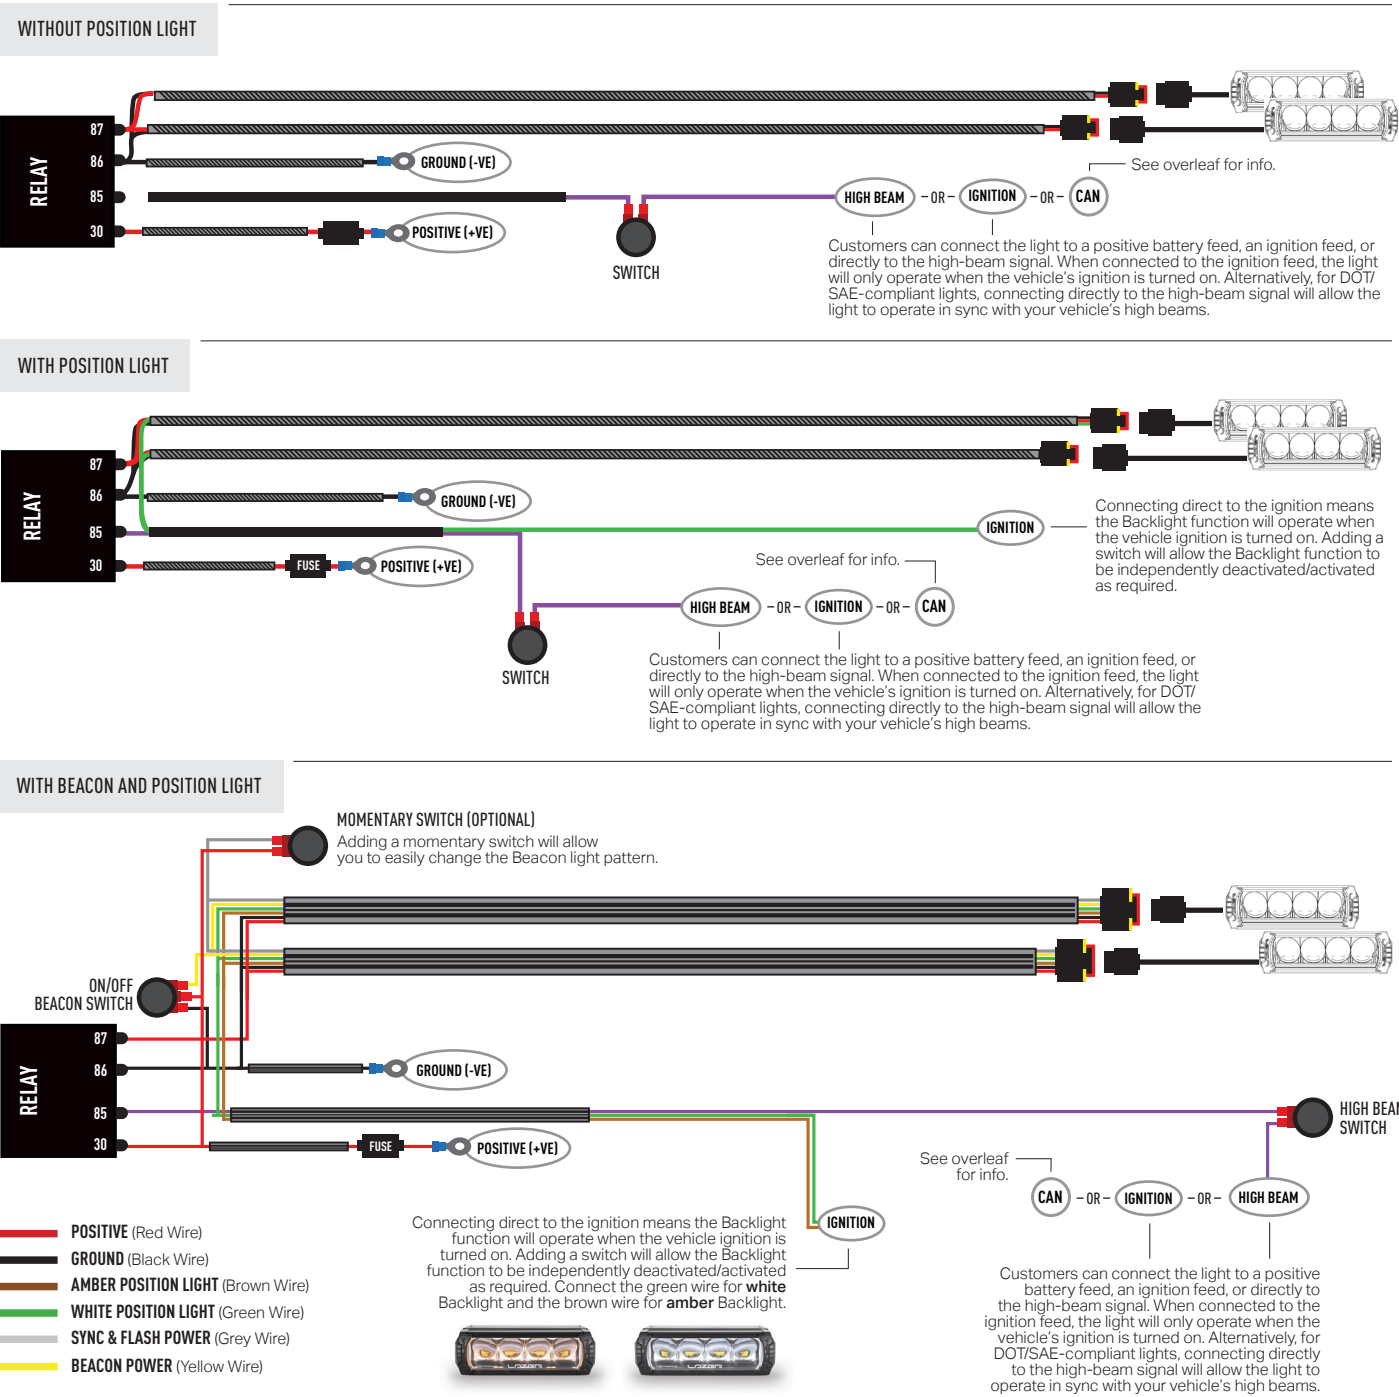

BACKLIGHT FUNCTION

Many of the LR Series and Sentinel lamps come with the option to connect an amber or yellow backlight. For operation of either, connect the corresponding colored signal wire and pin, into the remaining vacant lamp connector terminal (as per illustrations below).

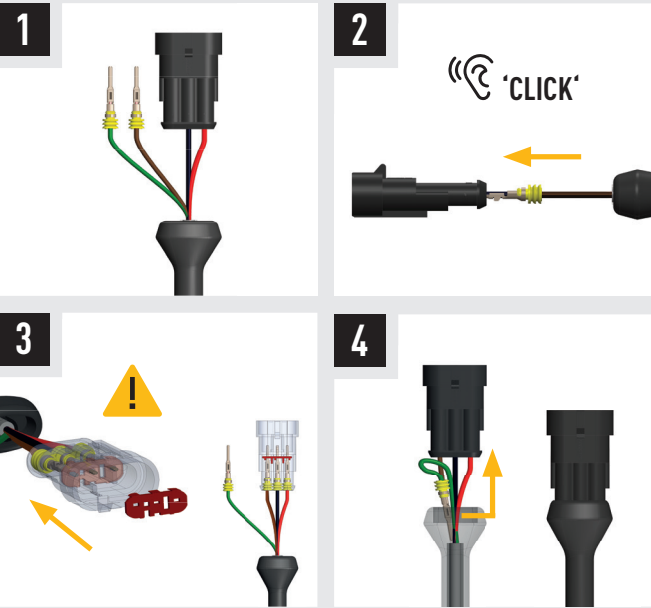

For removal of contacts, please refer to our YouTube channel.

LAMP OPERATING MODES

The lamp features two levels of intensity. To switch between BOOST mode and LOW OUTPUT (DOT / SAE Compliant) mode, flash the vehicle high beam off and on rapidly (<0.5secs) from High Beam ON condition (High Beam must have been active for >2s for the mode to change). Note, the lamp automatically resets to BOOST mode after the lamp being off again for >2s.

To permanently operate the lamps in **BOOST mode**, turn the vehicle high beam on for 20s (+/- 3s) then flash the vehicle high beam off/on 14 times - the light will pulse twice to indicate BOOST mode only is activated.

To permanently operate the lamps in **LOW OUTPUT (DOT/ SAE compliant) mode**, turn the vehicle high beam on for 20s (+/- 3s) then flash the vehicle high beam off/on 19 times - the light will pulse three times to indicate LOW OUTPUT mode only is activated.

To return to the **default mode** where the light can quickly switch between BOOST and LOW OUTPUT mode, turn the vehicle high beam on for 20s (+/- 3s) then flash the vehicle high beam off/on 9 times – the light will pulse to indicate the default mode is activated.

Scan the QR code for more information.



Please visit the lamps' product page on our website at www.triple-r-lights.com to view the DOT / SAE compliance test reports.