

ACCESSORIES



VEHICLE MOUNTING KITS



LENS COVERS



WIRING KITS



ANTI-THEFT KITS



STAY-BAR KITS

TRIPLE-R
HIGH PERFORMANCE LIGHTING

WWW.TRIPLE-R-LIGHTS.COM

We appreciate your purchase of a Triple-R Lights product, and value your feedback. If you would like to leave feedback on your Triple-R Lights experience, please head to the relevant product page on our website www.triple-r-lights.com.

+1 520 468 2633
sales@triple-r-lights.com

Triple-R Lights LLC, 600 North Bullard Avenue, Suite 6,
Goodyear, Arizona, 85338, USA



UK BUILT | US DRIVEN



/TRIPLERLIGHTS

TRIPLE-R
HIGH PERFORMANCE LIGHTING


SENTINEL

INSTRUCTIONS

IMPORTANT

Please disconnect the vehicle battery before installing or servicing your LED light installation. If in doubt, it is recommended to use the services of a professional installer.

It is recommended to use the available corresponding Triple-R wiring kit for your product. If utilizing existing (non Triple-R) wiring, make sure to use appropriate wire gauge and fusing in line with your lights technical specification.

Please note: every Triple-R product is protected against moisture ingress. Your warranty stays in place even if the lamp connector is removed. For more details please see below.

WARRANTY INFORMATION

Your purchase of this Triple-R Lights product is an investment in a product designed and manufactured to the highest standards, but sometimes things can go wrong. You do not need to register your product with us, as we can trace the product through the unique serial number of the lamp.


In the unlikely event of having to make a claim, please retain your purchase receipt and pass it back to the retailer from where you first purchased the product, at the point of raising any issue.

We hope you enjoy your Triple-R Lights product, and wish you many years of a safer, more enjoyable night driving experience.

ELECTRICAL INFORMATION

WITHOUT BACKLIGHT (2-PIN) | SENTINEL 7"

— BLACK WIRE: GROUND
— RED WIRE: POSITIVE

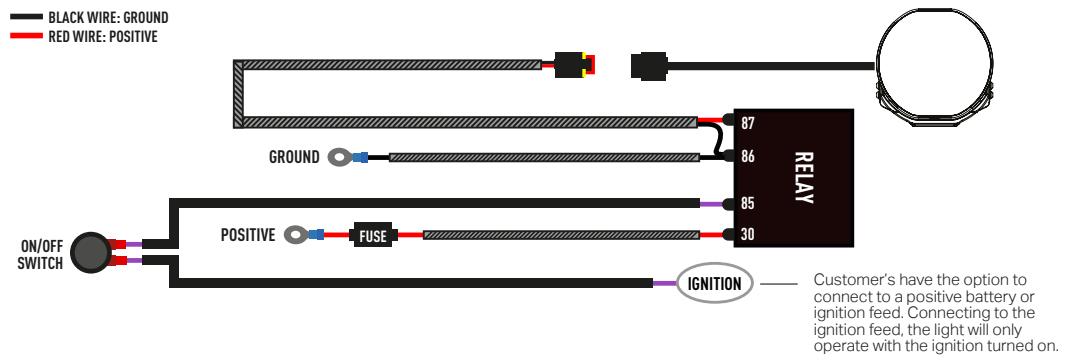


Customer's have the option to connect to a positive battery or ignition feed. Connecting to the ignition feed, the light will only operate with the ignition turned on.

WITH BACKLIGHT (3-PIN) | SENTINEL 7" ELITE

See adjacent for additional wiring information for lamps that have integrated amber and white backlight function.

— BLACK WIRE: GROUND
— RED WIRE: POSITIVE
— GREEN WIRE: BACKLIGHT

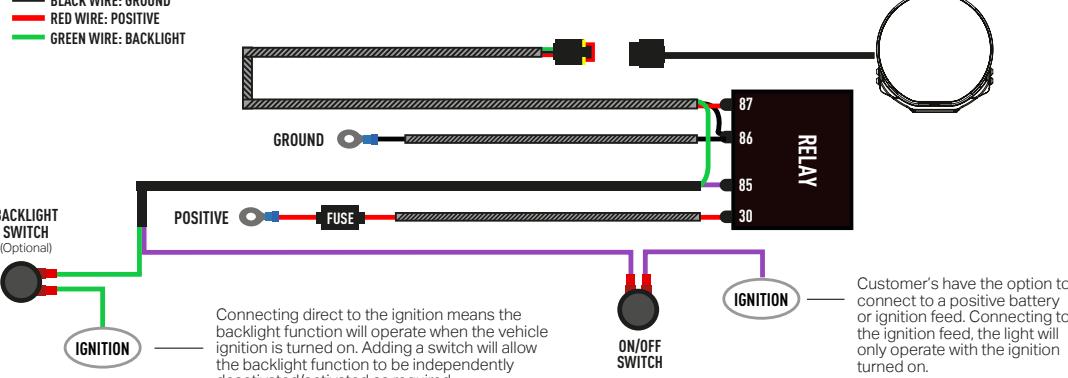


Connecting direct to the ignition means the backlight function will operate when the vehicle ignition is turned on. Adding a switch will allow the backlight function to be independently deactivated/activated as required

Customer's have the option to connect to a positive battery or ignition feed. Connecting to the ignition feed, the light will only operate with the ignition turned on.

WHITE AND AMBER BACKLIGHT FUNCTION

Some of the Sentinel lamps come with the option to connect an amber or yellow backlight. For operation of either, connect the corresponding colored signal wire and pin, into the remaining vacant lamp connector terminal (as per illustrations below).

Green Wire = White Backlight
Brown Wire = Amber Backlight

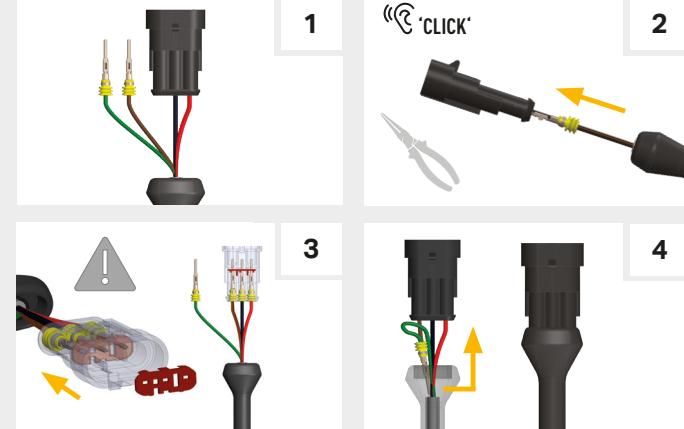

For removal of contacts, please refer to product instructions online.