



LOW BEAM WITH INTELLIGENT LOW BEAM ASSIST



LOW BEAM WITH INTELLIGENT LOW BEAM ASSIST
Responding to oncoming road traffic



TRIPLE-R 1250 ELITE I-LBA HIGH BEAM

MOUNTING OPTIONS

SIDE MOUNTING


Please use a thread seal compound (i.e. **Loctite 222**) to protect the lamp fastener from binding over time. See our T&Cs for more info.



R SERIES

CENTER MOUNTING

Tighten the M5 grub screws when bracket is positioned in the optimum position to suit the vehicle mounting points.

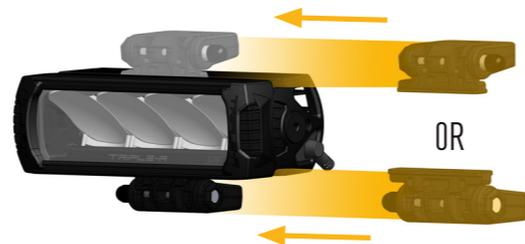

LINEAR


Push the bracket all the way on to the lamp so that the hook engages with the lamp feature, before tightening grub screw.



TRIPLE-R
HIGH PERFORMANCE LIGHTING

A LAZER LAMPS COMPANY

INTELLIGENT LOW BEAM ASSIST INSTALL INSTRUCTIONS

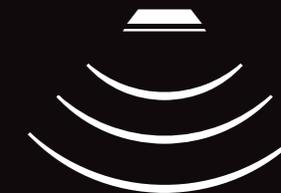

TRIPLE-R
HIGH PERFORMANCE LIGHTING

WWW.TRIPLE-R-LIGHTS.COM

We appreciate your purchase of a Triple-R Lights product, and value your feedback. If you would like to leave feedback on your Triple-R experience, please head to the relevant product page on our website www.triple-r-lights.com.

INTELLIGENT LOW BEAM ASSIST PATENT PENDING

For more information, please visit: www.triple-r-lights.com/ip

+1 520 468 2633


sales@triple-r-lights.com

Triple-R Lights LLC, 5150 W. Phelps Rd,
51 Bells Business Park, Suites 1-2, Glendale,
Arizona, 85306, USA

UK BUILT | US DRIVEN /TRIPLERLIGHTS


(ALL-32-BK-004)

ELECTRICAL CONNECTION

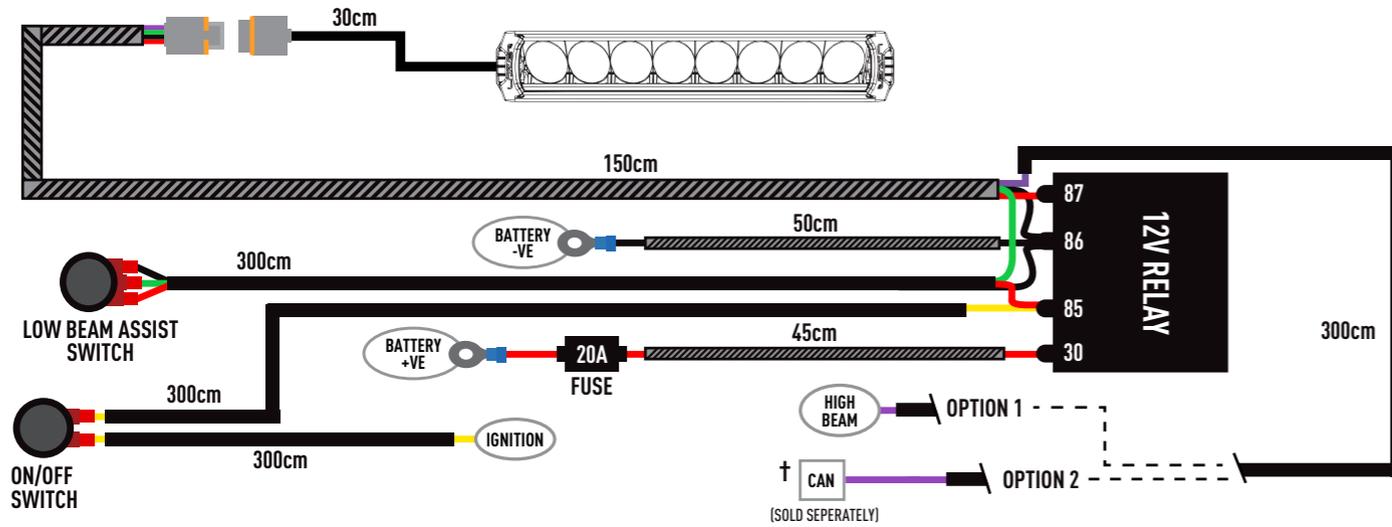

MOUNTING POSITIONS

For the optimum sensor performance, we recommend mounting at <1m / 3ft.

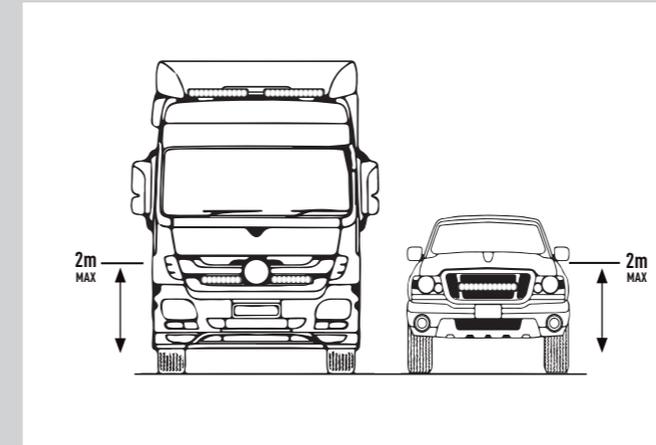

QUICK-START GUIDE


Intelligent Low Beam Assist (i-LBA) mode only activated after more than 3 seconds of High Beam use. Thereafter, the product will enter i-LBA mode whenever the high beam is deactivated (unless i-LBA mode is deactivated manually via the switch).

Light output responds automatically to oncoming traffic and other light sources (e.g. reflective signs).

Sensitivity of i-LBA sensors will adjust over time considering driving conditions and left/right hand drive.

For optimal performance clean lamp before use.

FUNCTIONALITY

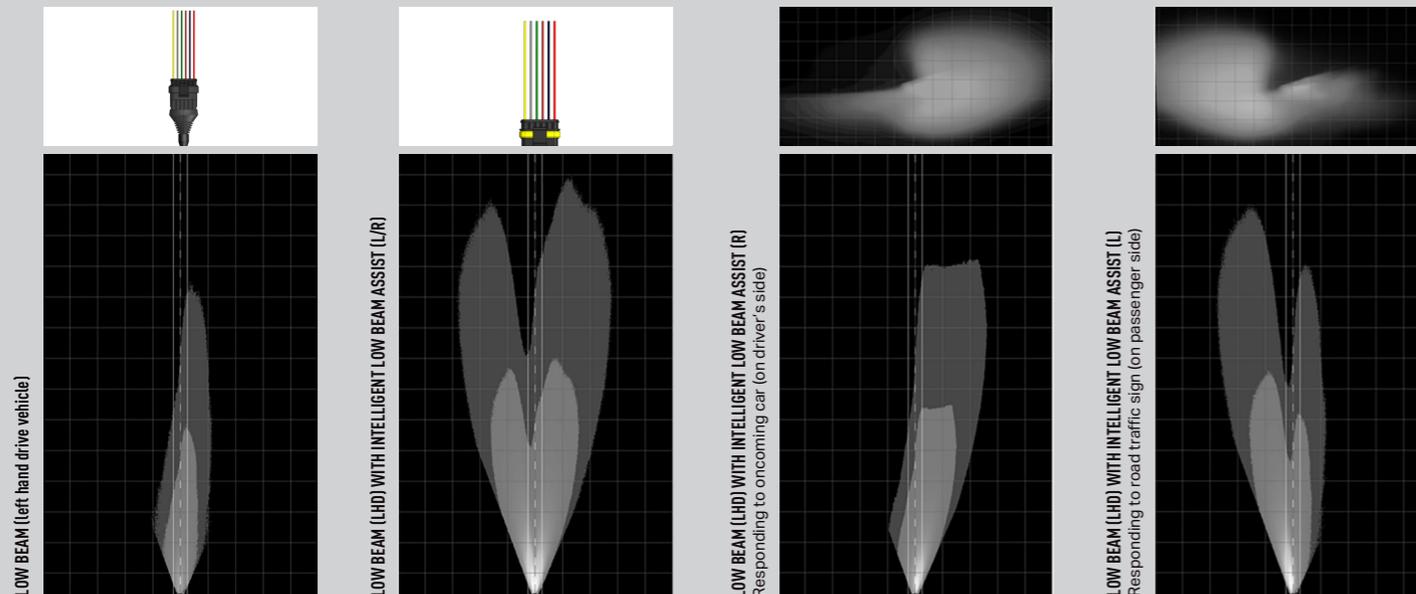


†CAN INTEGRATION

For vehicles where it is not possible to locate a 12V side light / high beam signal, it will be necessary to take those signals from the vehicle's CAN system.

For connection options please visit the Triple-R Lights website, or contact your nearest dealer.



Scan the QR code for more information on CANNY.

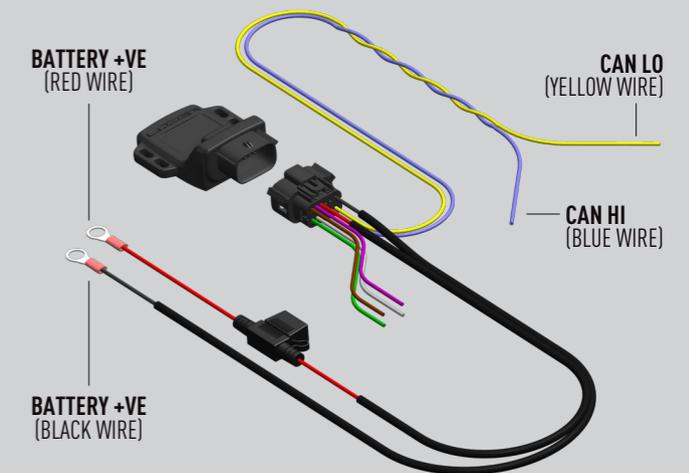

EXAMPLE: CNY-DIR-K (SOLD SEPARATELY)

- OUTPUT 1 (PURPLE WIRE)
- OUTPUT 2 (BROWN WIRE)
- OUTPUT 3 (GREEN WIRE)
- OUTPUT 4 (GREY WIRE)