

TRIPLE-R

H I G H P E R F O R M A N C E L I G H T I N G



MERCEDES SPRINTER (FRONT WHEEL DRIVE) GRILLE INTEGRATION KIT FOR LR-750

FITTING INSTRUCTIONS

TECHNICAL SUPPORT

For additional support, please contact us by email: sales@triple-r-lights.com

DIFFICULTY LEVEL



TOOLS REQUIRED



**DRILL BIT
3.5MM**



**SPANNER
10MM**



**WIRE STRIPPERS
AND RATCHET CRIMPERS**



WIRE CUTTERS



HACKSAW




**ALLEN KEY
SIZE: 4**



**PHILLIPS / T-25 TORX
SCREWDRIVER**



**PLASTIC
TRIM TOOLS**

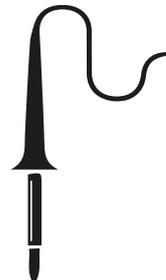

**SOLDERING
IRON**

STEP 1



Remove the 3x Screws holding in the grille, and remove the front grille.

STEP 2



Remove cover's on both sides that are located behind the grille.

STEP 3



Once both cover's are removed, the grille can be re-installed for the next steps.



STEP 4


Next images show grille off the vehicle, but installation should continue with the grille left on the vehicle.

Place cutting guides on the grille as shown.



STEP 5

Cut the vertical veins as per the cutting guides using a hacksaw.

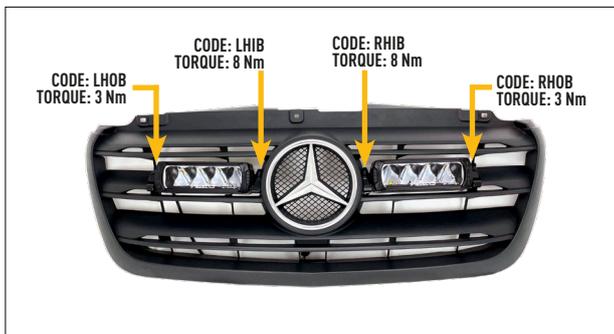

STEP 6

Fix the Grille Mount brackets to both lights as per the diagram shown.



STEP 7

Slide the lights into the grille (outboard first), ensuring the clips on the brackets are secured at the back of the grille.



STEP 8

Drill a 3.5mm hole for each inboard bracket for the self tapping screws as shown.




STEP 9


Secure the lights with a self tapping screw where you have pre-drilled the holes.

WIRING


LR-750

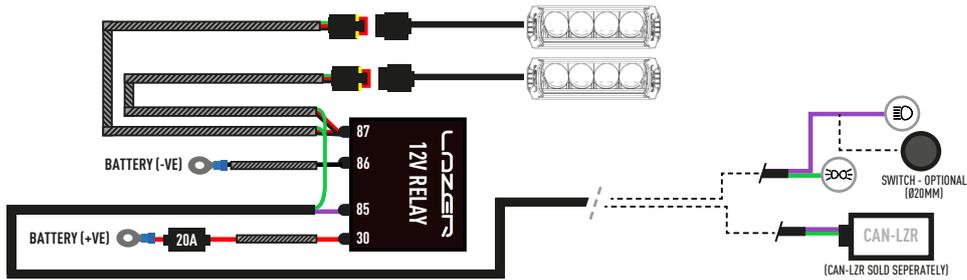

LR-750 ELITE

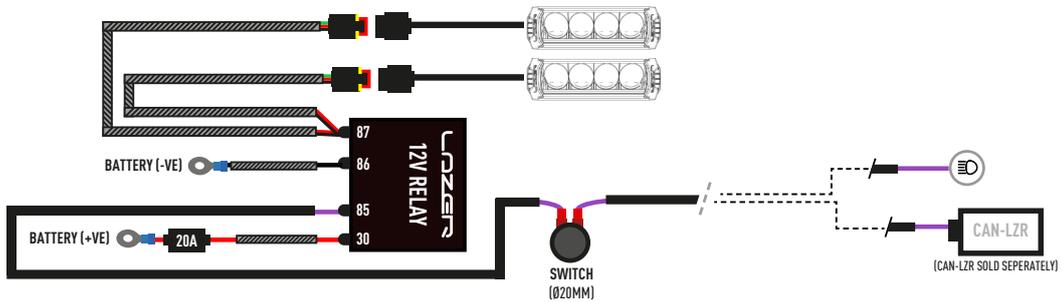

LR SERIES - BACKLIGHT FUNCTION (OPTIONAL)

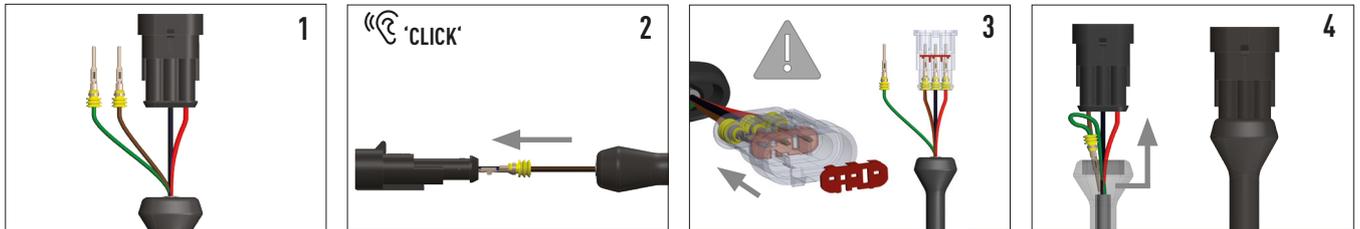



TRIPLE-R

HIGH PERFORMANCE LIGHTING

WWW.TRIPLE-R-LIGHTS.COM

sales@triple-r-lights.com

Triple-R Lights LLC, 16192 Coastal Highway,
Lewes, Delaware, 19958, USA



UK BUILT | US DRIVEN