

TRIPLE-R

HIGH PERFORMANCE LIGHTING



LAND ROVER DEFENDER 2020+

ROOF MOUNTING PODS FOR LINEAR-12

FITTING INSTRUCTIONS

TECHNICAL SUPPORT

sales@triple-r-lights.com


WHAT'S INCLUDED

- 2x Roof Pod Mounting Base (LH/RH)
- 2x Roof Pod Covers (LH/RH)
- 2x Positioning Guides (LH/RH)*
* position guides may be supplied as plastic or card
- 1x Tube of Dow Corning
- 1x Security Fastners Pack

DIFFICULTY LEVEL



TOOLS REQUIRED

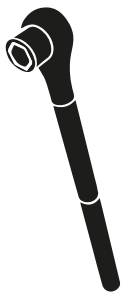

METRIC
SOCKET SET



WIRE STRIPPERS
AND RACHET CRIMPERS



WIRE CUTTERS



PHILLIPS / T-30 TORX
SCREWDRIVER



PLASTIC
TRIM TOOLS

PRE-INSTALLATION CHECKS

Ensure battery is disconnected.

INSTALLATION

STEP 1



Remove the A pillar trim screw cover using a plastic trim tool.



Once the trim is removed, it will expose the T30 torx screw.



Undo the T30 Torx screw.

STEP 2




Once the screw is removed slide the 'A' Pillar trim downwards.



Trim can now be removed. 'A' Pillar trim needs to be removed on both sides of the vehicle.


STEP 3 - WIRING WITH SPLICE

Mount the relay and connect the live and earth connections.

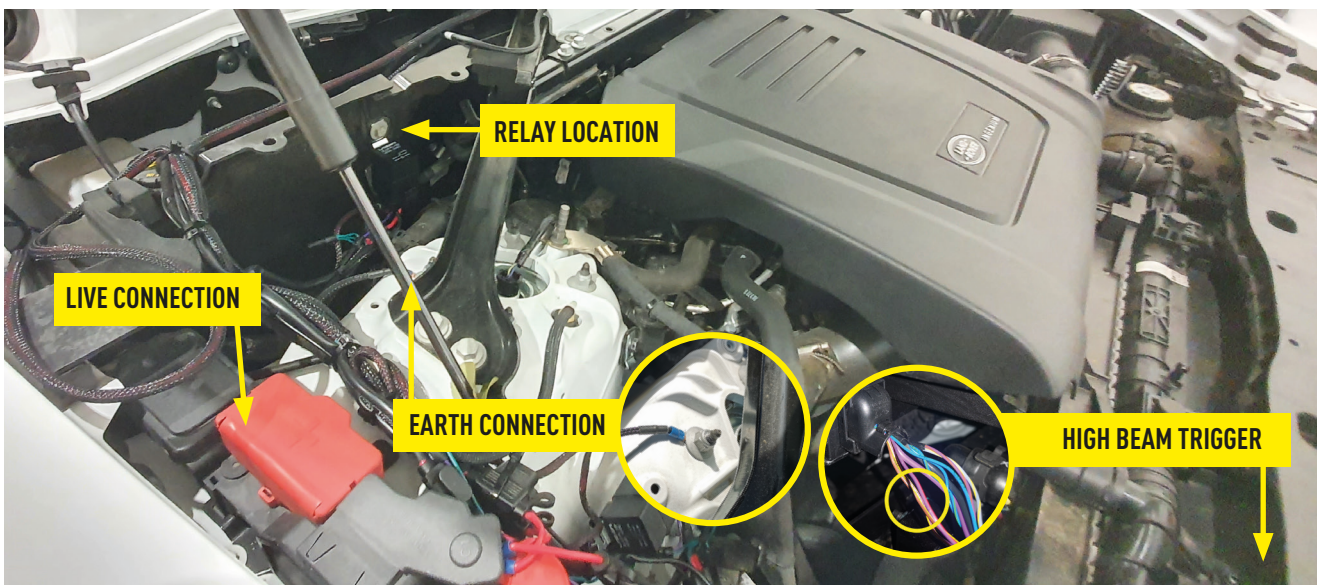


STEP 3 - WIRING WITH SWITCH

Mount the relay and connect the live and earth connections.

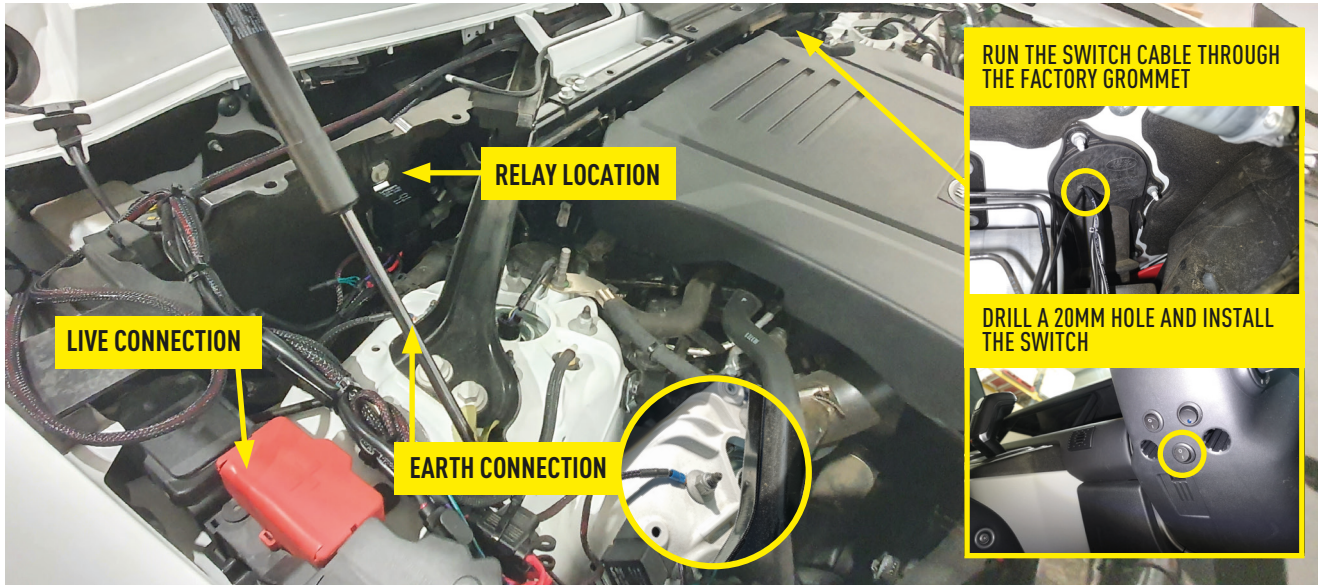

STEP 4

Unscrew the clips and remove the scuttle panel trim.

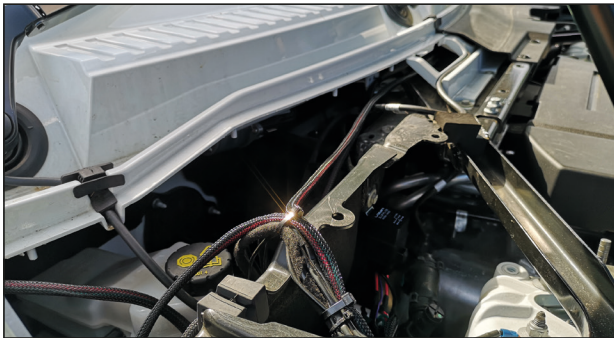


STEP 5

Run the lamp cables through the scuttle, one to the left, and one to the right.



STEP 6

Feed the cable across the scuttle panel ensuring the cable is secured with cable ties and away from any moving parts.

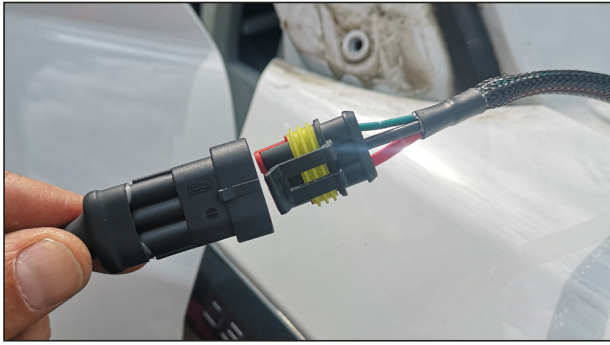

STEP 7

Plug in the harness extension cables.



STEP 8

Run the cables up the A pillar (Reccomended to secure with tape).

Repeat both sides and then replace the A pillar trims.



STEP 9

Tuck the extension cable into the gap on the roof using a plastic trim tool.




STEP 10

Familiarise yourself with the pod bases before bonding to the vehicle roof, one is for left side and one is for right side.



STEP 11

Place the position guides on the roof. These are marked LEFT and RIGHT (plastic type) as you look at the vehicle or there will be printed markings showing you where to place them on the roof (cardboard type).

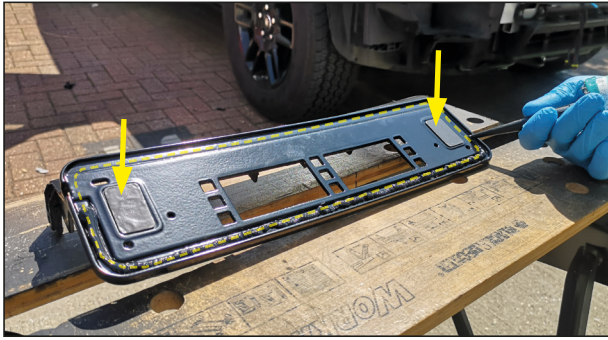
STEP 12


Apply included sealant to the base of the roof pod as shown and remove the 3M pad backing ready to position in place.


STEP 13

Position the base on the roof by butting the rear edge of the base up to the positioning guides.


STEP 14

Install the lamps to the base and plug the power cables.

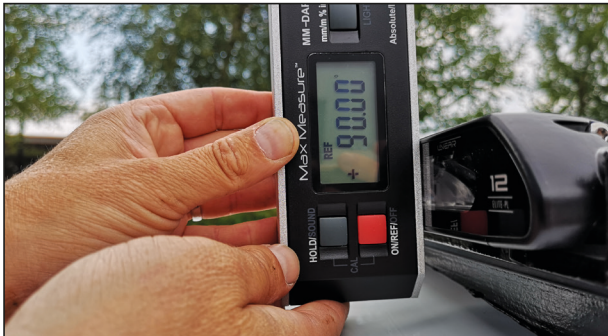
STEP 15

Position the lamp angle to 90 degrees.



STEP 16

Install the included rubber trim around the bottom of the pod cover.



STEP 17

Install the pod cover over the top of the lamp. Excess cable can also be secured and hidden inside the cover.

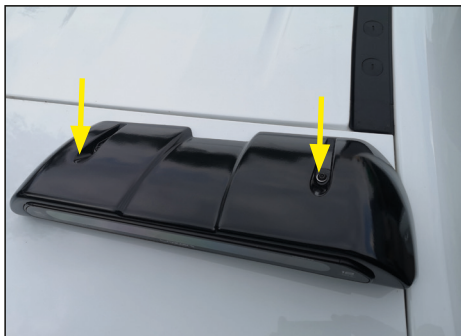

STEP 18

Install the pod cover security screws.



STEP 19

Re-connect battery and ensure lights are working correctly.



TRIPLE-R
HIGH PERFORMANCE LIGHTING

WWW.TRIPLE-R-LIGHTS.COM

sales@triple-r-lights.com

Triple-R Lights LLC, 16192 Coastal Highway,
Lewes, Delaware, 19958, USA

