


CAN INTERFACE INSTALLATION FOR LAND ROVER DEFENDER 2020+

PAGE 1

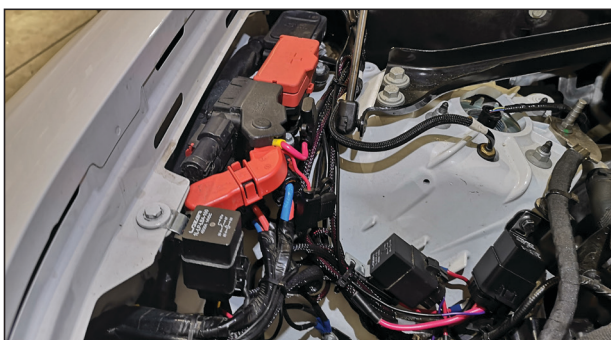

STEP 1

Connect the live connection.



STEP 2

Route the lamp and live cable along here and into the scuttle area to push through grommet.



STEP 3

Push the cables through the grommet, you will need to pierce the grommet.



STEP 4

Cables will fall into this area please route to the passenger side.

CAN INTERFACE INSTALLATION FOR LAND ROVER DEFENDER 2020+



STEP 5

Remove the cover under the passenger front seat to access can module.



STEP 6

Undo the 2 x 10mm nuts holding in the black module. Move module to one side, **do not disconnect.**



STEP 7

Unbolt the remaining 4 x 10mm nuts holding in the silver module. **Do not disconnect.**




STEP 8

Lay the can wires inside the channel on the contactless reader as seen below.

Can Lo = Grey/Purple
Can Hi = Purple/

CAN INTERFACE INSTALLATION FOR LAND ROVER DEFENDER 2020+

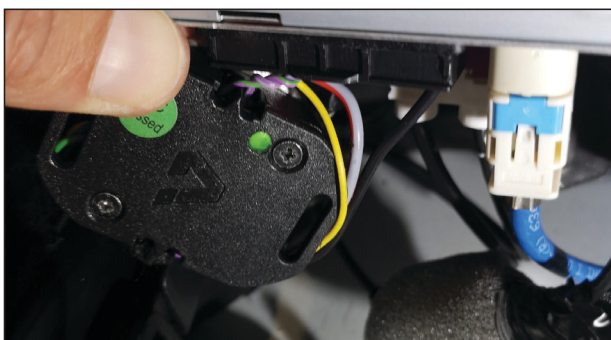


STEP 9

Screw the contactless reader base to the contactless reader. The green light will illuminate once power is applied to the Can Interface and Can data is being received.



STEP 10

Plug the contactless reader into the CAN loom and connect the green and purple wires to the corresponding wires on the wiring kit.

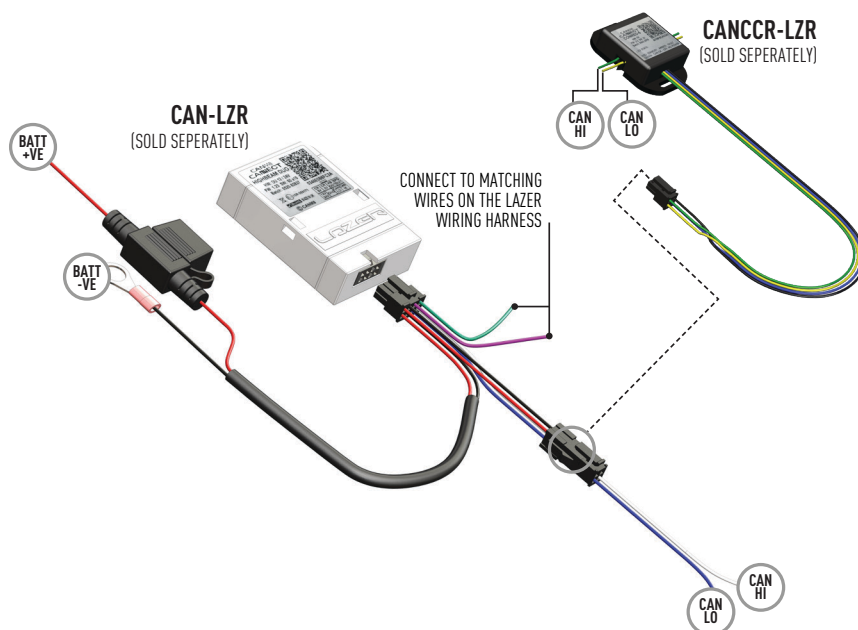

sales@triple-r-lights.com

Triple-R Lights LLC, 16192 Coastal Highway, Lewes, Delaware,
DE 19968, UNITED STATES