

# TRIPLE-R

H I G H P E R F O R M A N C E L I G H T I N G



## VW GOLF 2017+ MOUNTING SOLUTIONS

---

FITTING INSTRUCTIONS

## TECHNICAL SUPPORT

For additional support, please contact us by email: [sales@triple-r-lights.com](mailto:sales@triple-r-lights.com)

## WHAT'S REQUIRED

- HIGH PERFORMANCE LED SPOTLIGHT(S) - ST/LINEAR/TRIPLE-R OPTIONS AVAILABLE.
- 1x ONE/TWO LAMP HARNESS KIT
- 1x CANBUS HIGHBEAM INTERFACE
- 1x VW GOLF (2017+) MOUNTING KIT


## DIFFICULTY LEVEL



## TOOLS REQUIRED



DRILL BIT  
5MM

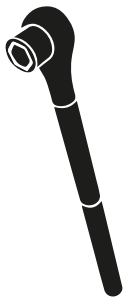

METRIC  
SOCKET SET



WIRE STRIPPERS  
AND RATCHET CRIMPERS




WIRE CUTTERS



BUCKET



ALLEN KEY SET

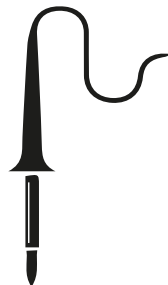

SOLDERING  
IRON



T-25 TORX  
SCREWDRIVER



PLASTIC  
TRIM TOOLS



RIVET GUN



## PRE-INSTALLATION CHECKS

1. Ensure battery is disconnected.

## BUMPER REMOVAL



### STEP 1




Remove the x2 T25 screws from either side of the grille.

Then gently pull grille off.



### STEP 2

Remove the x4 T25 screws as shown on either side of the front wheel arches.

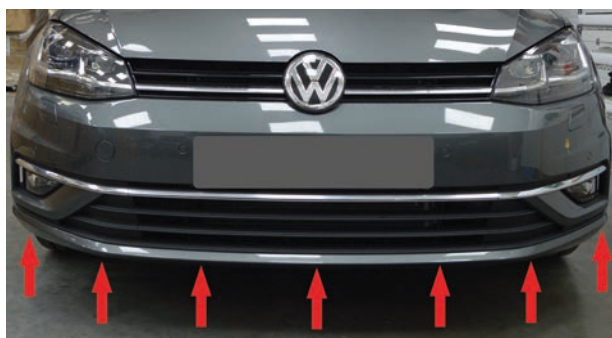


### STEP 3

Remove the x7 T25 screws from under the bumper as shown.



### STEP 4

Un-clip both sides of the bumper.

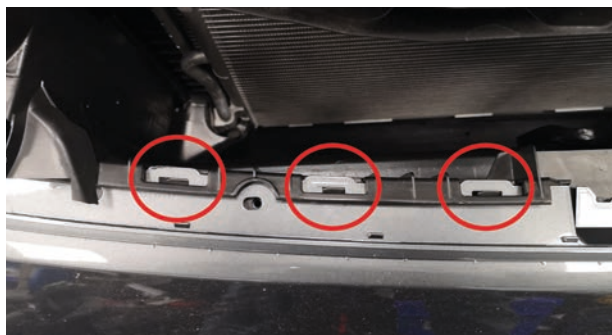

### STEP 5


Unclip the 3 retaining clips on either side and lower the bumper to the ground.

**STEP 6**

Unplug fog lights on both sides.

**STEP 7**

Unplug parking sensors.

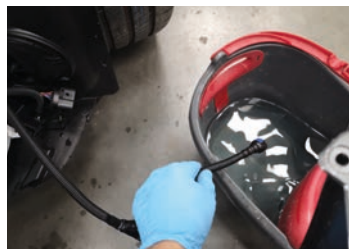**STEP 8**

Unplug the headlight washer closest to the water reservoir. Use a bucket to catch the screen wash fluid.


**STEP 9**

Unplug the headlight washer hose from the bumper and drain into bucket to avoid spilling/slipping.

The bumper can now be set aside.




## MOUNTING YOUR LR-SERIES LED LIGHTS

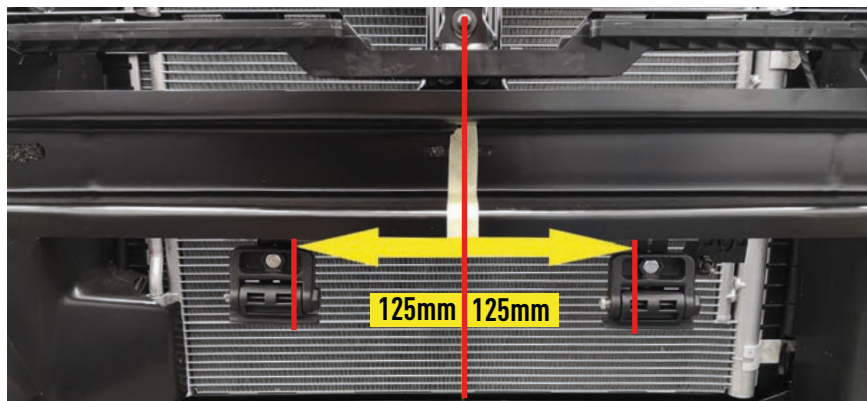

### STEP 1

Mark where the brackets should be mounted on the bumper beam as shown (125mm from centre line).

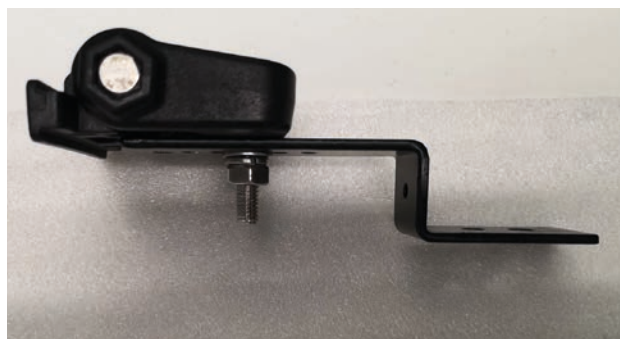

### STEP 2



Bolt the Centre Mounts as shown in the slot hole, in line with the 4th hole.



### STEP 3


Drill the 5mm holes for mounting the universal mounting brackets as per the measurements above depending on what light you will mount to your vehicle.



### STEP 4



Using a rivet gun, rivet the brackets in place (2 rivets per bracket as shown).

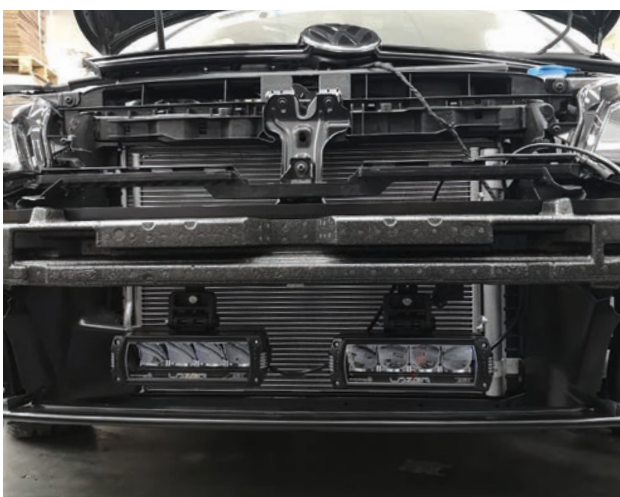


### STEP 5

Slide the light(s) on to the centre mounts and position the light(s) in place. Then tighten the M5 grub screws on the centre mounts.

Lights shown: 2x LR-750's and LR-1250.




## MOUNTING YOUR LINEAR LED LIGHTS

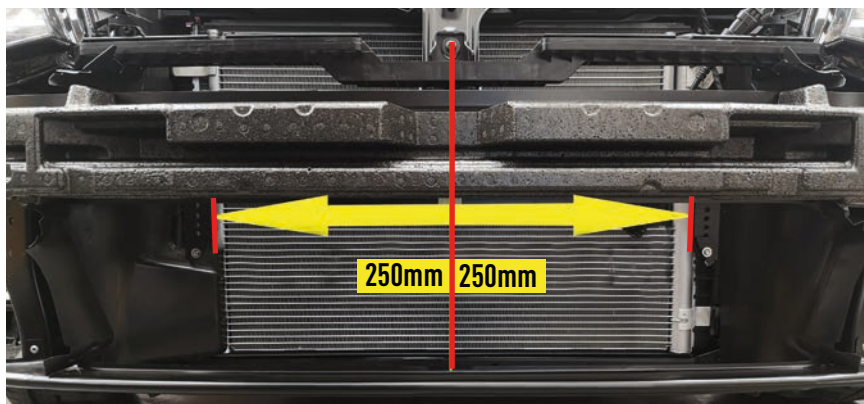

### STEP 1

Mark where the brackets should be mounted on the bumper beam as shown (250mm from centre line).

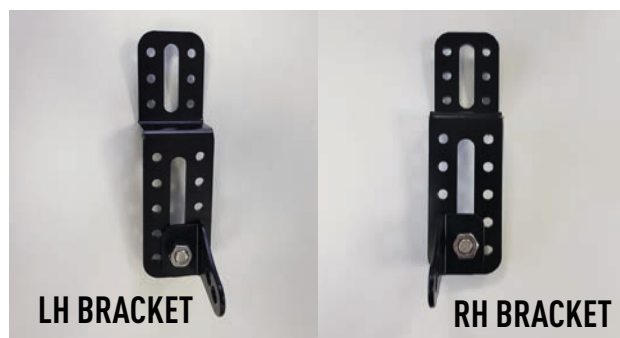

### STEP 2

Mount the side brackets from the lamp box on to each mounting bracket as shown (in-line with last mounting hole).



### STEP 3

Drill the 5mm holes for mounting the universal mounting brackets as per the measurements above depending on what light you will mount to your vehicle.



### STEP 4

Using a rivet gun, rivet the brackets in place (2 rivets per bracket).



### STEP 5

Mount the Linear-18 to the side brackets using the M6 bolts and washers as shown.



## WIRING UP YOUR LIGHT

For instructions on wiring a LR-1250 Elite with i-LBA, please refer to the instruction guide leaflet in the lamps box.

**Please note:** Vehicle battery will need to be removed for this process.

### IMPORTANT INFORMATION!

When you start any VW MY06+ after having the battery disconnected the dashboard will display multiple errors.

To reset the errors please follow steps below:

- 1: TURN ENGINE ON
- 2: TURN WHEELS FULL LOCK TO LEFT
- 3: TURN WHEELS FULL LOCK TO RIGHT
- 4: SWITCH IGNITION OFF
- 5: RESTART VEHICLE AND ERRORS WILL DISAPPEAR



### STEP.1

Locate the cable entry grommet that is usually hidden by the vehicle battery.



### STEP.2

Feed the thin red cable from the wiring kit through the cable entry grommet.



### STEP.3

Locate the cable inside the vehicle which feeds through the cable grommet to the footwell.

**STEP.4**

Carefully remove climate control facia.

Then pull out the x4 retaining plugs to release the climate panel.

**STEP.5**

Locate the 2 Can wires in the larger black plug.

**Green = Can Hi**

**Orange/Brown = Can Lo**

**STEP.6**

Connect wireless reader or CANM8 white and blue wires to the vehicle Can wires according to Hi/Lo.

**STEP.7**

Feed red wire up to climate panel area.

**STEP.8**

Connect thin red wire from the wiring kit to the purple wire from CanM8.



**STEP.9**

Find a suitable Live and Ground for CanM8.

Mount the CanM8 under the radio.

**STEP.10**

Relocate battery **but leave disconnected.**

Drill a hole and secure the relay with a self tapping screw as shown.

**STEP.11**

Feed the lamp connector(s) through to the front of the bumper.

**INSTALLATION CHECKS**

1. Re-connect battery.
2. Test light bar is working fully before re-assembling vehicle.

**TRIPLE-R**  
HIGH PERFORMANCE LIGHTING

**WWW.TRIPLE-R-LIGHTS.COM**

sales@triple-r-lights.com  
Triple-R Lights LLC, 16192 Coastal Highway,  
Lewes, Delaware, 19958, USA



**UK BUILT | US DRIVEN**