



4-WAY RALLY POD FOR CARBON-6 (GEN3)


ASSEMBLY INSTRUCTIONS



STEP 1.



PARTS
1: M6 X 3D WASHER

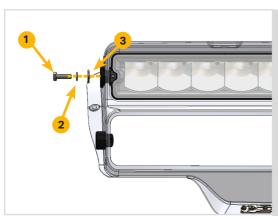


STEP 2.




PARTS

- 1: M6 X 16 HEX BOLT
- 2: M6 SPLIT LOCK WASHER
- 3: M6 X 3D WASHER

RECOMMENDED TIGHTENING TORQUE FOR M6 BOLTS: **5NM**

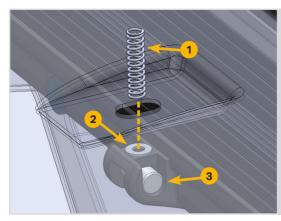


STEP 3. (FINE ADJUSTMENT)




PARTS


- 1: M4 SPRING
- 2: M4 WASHER
- 3: M4 CROSS DOWEL

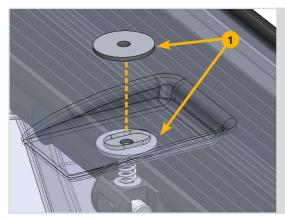


STEP 4. (FINE ADJUSTMENT)



PARTS
1: M4 LARGE WASHER

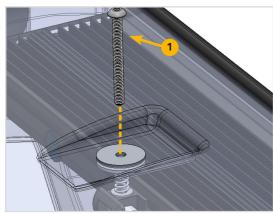

STEP 5. (FINE ADJUSTMENT)



PARTS
1: M4 SOCKET HEAD BOLT



sales@triple-r-lights.com
Triple-R Lights LLC, 16192 Coastal Highway,
Lewes, Delaware, 19958, USA

