

FORD RANGER / RAPTOR (2023+)

ROOF POD REMOVAL INSTRUCTIONS

DIFFICULTY - 1/5



INSTALLATION TIME


30 MINS

TOOLS REQUIRED

- Glass cut out handles
- Fibre glass cut out line
- Plastic scraper blades
- Tar and Glue remover
- Microfibre cloths
- Polish (optional)

Glass removal handles shown with fibre removal cord. It is important to use a synthetic fibre as any metal removal line WILL damage the paint across the roof.

It is best to start with a clean truck to help minimise any damage to the paint.

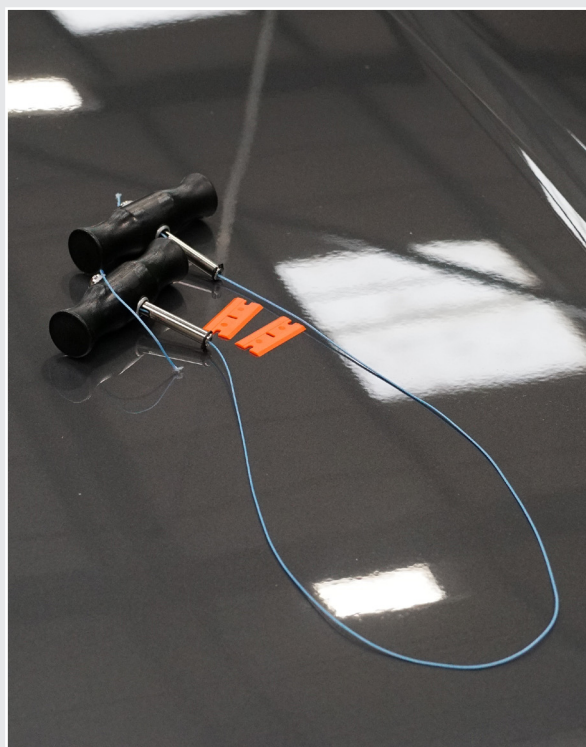



STEP 1

Tuck the line under one corner of the pod. This may be quite tricky as the pod should be almost sealed to the roof but it will eventually go under. It is important to NOT use any trim tools here to pry the pod up, as the metal roof is very easily dented.



STEP 2

Work the line to slice through the adhesive holding the pod to the roof.



STEP 2.1

If you have passed the cable through the roof, you will need to work around this as the fibre will not cut through.



STEP 3

Lift off pod and remove any wiring from the vehicle.



STEP 4

Use a plastic razor to cut away at the left over glue on the vehicle roof.



STEP 5

Scrape the remainder of the glue away. Do not put too much pressure on the paint or you will scratch it.



STEP 6

Use tar and glue remover to help take off the final pieces of glue.

STEP 7

If your cable was passed through the roof, now seal up the hole (seal not supplied by Lazer).

STEP 8

Optional – give the roof a quick polish to remove any final marks.