

FORD BRONCO RAPTOR (2022+)

MODULAR BUMPER FOG LIGHT UPGRADE KIT



WHAT'S INCLUDED

- Lamp Holder with 2x Carbon-2 DRIVE (Yellow Dip) pre-mounted (LH/RH)
- M8x40 Button head screws (x4)
- Black lens covers for lamps (x2)
- Lamp Holder Bezel (LH/RH)
- Two-Lamp Wiring Kit

TOOLS REQUIRED

- Socket Set/Spanner
- Torx T40 & T30
- Push pin Pry Tool
- Wire Cutters
- Wire Strippers
- Heat Source

Also required (not included in kit):

- Cable Ties
- Heat Shrink
- Loom Tape
- Crimps

FOR VEHICLES WITH OE FOG LIGHTS

INSTALLATION TIME
1 HOUR

DIFFICULTY - 1 / 5



Ensure battery is disconnected before starting any wiring installation:

Remove negative on battery and insulate.


See last page for wiring diagrams.

INSTALLATION

STEP 1

Remove the 13x Pushpins.

Then, pull at the corners to release the clips.

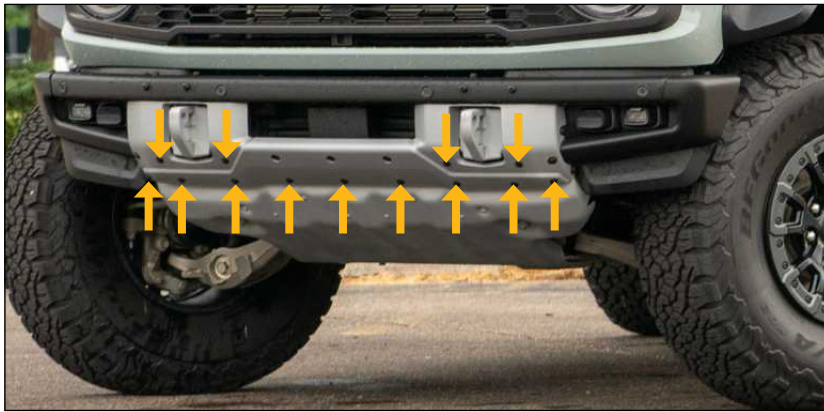

STEP 2

Remove the 3x T40 torx screws.

Note: The fog lamp assembly is shown removed in the next steps for clarity of fastener locations. Do not remove the assembly until all screws in Steps 3–6 have been removed.




STEP 3

Remove the 4x plastic push pins behind the fog light unit.



STEP 4


Remove the 3x T30 torx screws behind the fog light unit and remove valance.

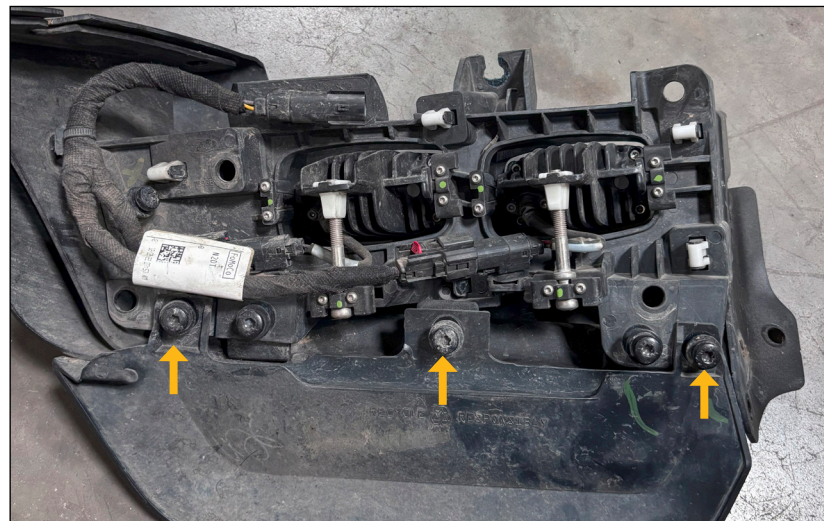



STEP 5

Unplug fog splitter from main fog harness.

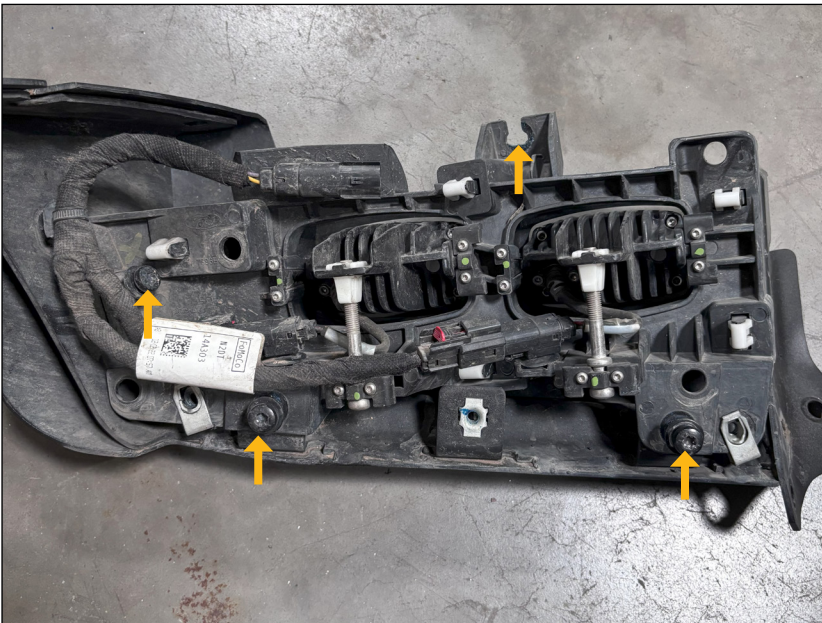

STEP 6

Remove 4x T30 torx screws that secure the fog housing to the bumper.



STEP 7


Once wiring has been completed (See next page for wiring diagrams), pass the lamp connectors through the bumper pocket, and connect to lamps.

Then, insert the fog light bezel into pocket and secure with the provided hardware (x2 Screws each side of vehicle).

DEFAULT OPTION: NO CAN (VEHICLE AUX SWITCHES)

FOG - Activated VIA vehicle fog.

HIGH BEAM - Activated by vehicle AUX 1.

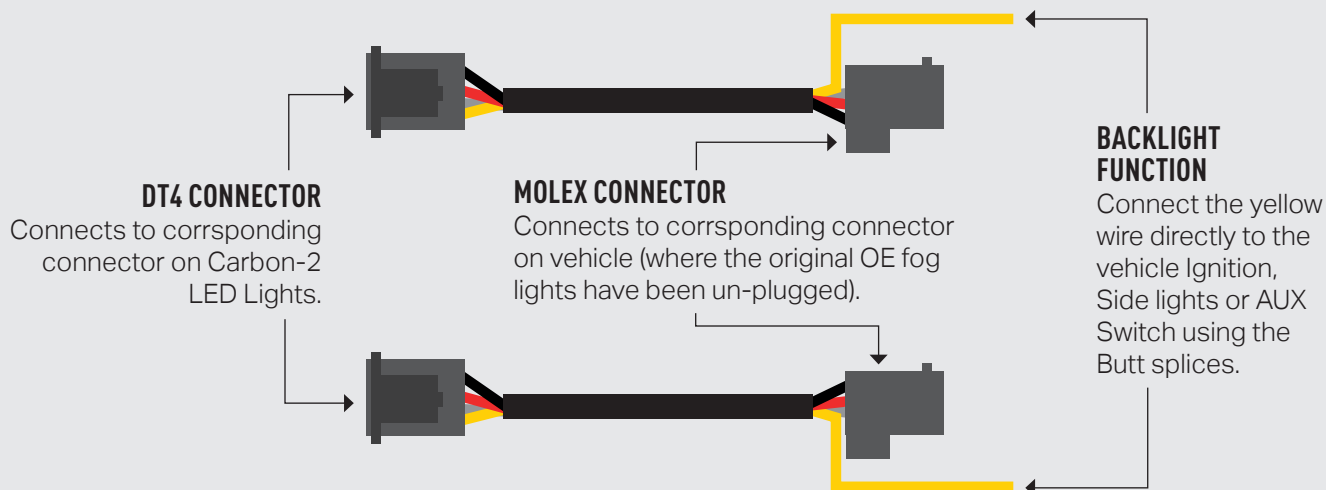

ALTERNATIVE OPTION: WITH CANNY (VEHICLE HARNESS: 2L-DT4-290)

